


 




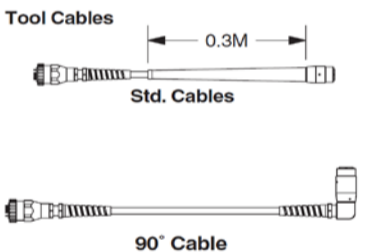 
System Accessories

Model Number	Ordering Number	Description
QC-SKTR	4761 5828 001	USB Socket Tray, 4 Position
QC-TL-4	4760 1629 001	USB Tower Light, 4 lights R/Y/G/B, with mounting bracket
QC-ADPT-1	4760 1630 001	USB to RS-232 Serial Adapter
QC-DIO-8CH	4761 7332 001	USB Digital 8x8 24V IO Box, including cable and mounting brackets
QC-BC-SCAN-1	4762 5754 001	USB Cabled Barcode Scanner, HD
QC-BC-SCAN-2	4762 5755 001	USB Cabled Barcode Scanner, LD
QC-BC-SCAN-WL	4762 5756 001	USB Wireless Barcode Scanner, Including Charging Cradle
IC-BIT-8	IC-BIT-8	8 Position Bit Tray (19 PIN Cable also required, 5M or 10M)
IC-19PIN-5M	IC-19PIN-5M	5 Meter long 8-position socket tray cord set with one side fly lead
IC-19PIN-10M	IC-19PIN-10M	10 Meter long 8-position socket tray cord set with one side fly lead

 
Tool Accessories

GEA40 - K98SL	GEA40 - K98SL	Short Lever Kit: QE4, QE6, QE8	 Short Lever Kit
GEA40 - K98EL	GEA40 - K98EL	Extended Lever Kit: QE4, QE6, QE8	 Extended Lever Kit
GEA15-K48	GEA15-K48	QE4 Reaction Bar Kit	 Reaction Bar Kit
DEA120 - K48	DEA120 - K48	QE6 / QE8 Reaction Bar Kit (150 Nm max Angle, 90 Nm max inline)	 Pistol Reaction Bar Kit
GEP15-48	GEP15-48	QE4P Pistol Reaction Bar Kit	
15E4-K48	15E4-K48	QE4 Flanged Mounting Kit (Also requires 15E-27 coupling nut)	 Flanged Mounting Kit
GEM120-K48	GEM120-K48	QE6 and QE8 Flanged Mounting Kit (Also requires DAA4-27 coupling nut)	 Swivel Hanger Kit
GEA40-K364	GEA40-K364	QE6 / QE8 Swivel Hanger Kit (150 Nm max Angle, 90 Nm max inline)	

Tool Cables

CPS2-C0RD-3M	CPS2-C0RD-3M	QE2 Only; 3 Meter Straight Tool Cable	 <p>Tool Cables</p> <p>0.3M</p> <p>Std. Cables</p> <p>90° Cable</p>
CPS2-C0RD-3M-90	CPS2-C0RD-3M-90	QE2 Only; 3 Meter 90 degree Tool Cable (tool end)	
CPS2-C0RD-6M	CPS2-C0RD-6M	QE2 Only; 6 Meter Straight Tool Cable	
CPS2-C0RD-6M-90	CPS2-C0RD-6M-90	QE2 Only; 6 Meter 90 degree Tool Cable (tool end)	
CPS2-C0RD-10M	CPS2-C0RD-10M	QE2 Only; 10 Meter Straight Tool Cable	
CPS2-C0RD-10M-90	CPS2-C0RD-10M-90	QE2 Only; 10 Meter 90 degree Tool Cable (tool end)	
GEA40-CORD-3M	GEA40-CORD-3M	All Tools; 3 Meter Straight Tool Cable	
GEA40-CORD-3M-90	GEA40-CORD-3M-90	All Tools; 3 Meter 90 degree Tool Cable (tool end)	
GEA40-CORD-6M	GEA40-CORD-6M	All Tools; 6 Meter Straight Tool Cable	
GEA40-CORD-6M-90	GEA40-CORD-6M-90	All Tools; 6 Meter 90 degree Tool Cable (tool end)	
GEA40-CORD-10M	GEA40-CORD-10M	All Tools; 10 Meter Straight Tool Cable	
GEA40-CORD-10M-90	GEA40-CORD-10M-90	All Tools; 10 Meter 90 degree Tool Cable (tool end)	

Tool Extension Cables

GEA40-EXT-10M	GEA40-EXT-10M	All Tools; 10 Meter Tool Cable Extension; between controller and standard tool cable	 Extension Cable
GEA40-EXT-20M	GEA40-EXT-20M	All Tools; 20 Meter Tool Cable Extension; between controller and standard tool cable	
GEA40-EXT-40M	GEA40-EXT-40M	All Tools; 40 Meter Tool Cable Extension; between controller and standard tool cable	

Right Angle Cable Adapter (Controller Side)

GEA40-INT-01	GEA40-INT-01	All Tools; Right Angle Cable Adapter (Controller Side); 1 " cable length
GEA40-INT-02	GEA40-INT-02	All Tools; Right Angle Cable Adapter (Controller Side); 2 " cable length
GEA40-INT-03	GEA40-INT-03	All Tools; Right Angle Cable Adapter (Controller Side); 3 " cable length
GEA40-INT-04	GEA40-INT-04	All Tools; Right Angle Cable Adapter (Controller Side); 4 " cable length
GEA40-INT-05	GEA40-INT-05	All Tools; Right Angle Cable Adapter (Controller Side); 5 " cable length
GEA40-INT-06	GEA40-INT-06	All Tools; Right Angle Cable Adapter (Controller Side); 6 " cable length
GEA40-INT-07	GEA40-INT-07	All Tools; Right Angle Cable Adapter (Controller Side); 7 " cable length
GEA40-INT-08	GEA40-INT-08	All Tools; Right Angle Cable Adapter (Controller Side); 8 " cable length
GEA40-INT-09	GEA40-INT-09	All Tools; Right Angle Cable Adapter (Controller Side); 9 " cable length